0 HOW TO USE THE REMOTE CONTROL







 
After unlocking, the red LED flashes and the sensor can be adjusted by remote control.

If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits. If you do not know the access code, **cut and restore the power supply**. During 1 minute, you can access the sensor without introducing any access code.

To end an adjustment session, always lock the sensor.

SAVING AN ACCESS CODE

The access code is recommended for sensors installed close to each other.



DELETING AN ACCESS CODE

 


Enter the existing code

ADJUSTING ONE OR MORE PARAMETERS




RESTORING TO FACTORY VALUES



1 FIELD SIZE



 In order to change these settings by remote control, adjust the potentiometer to minimum








2 OUTPUT

OUTPUT MODE In order to change these settings by remote control, adjust the 2 DIP switches to OFF






 
HOLD TIME




3 LED

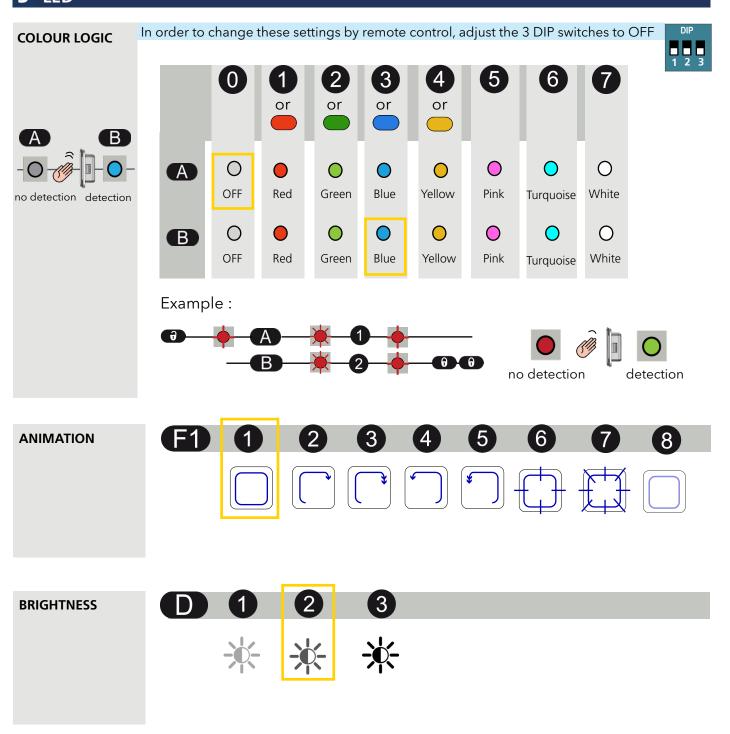

4 AUDIO ALERT

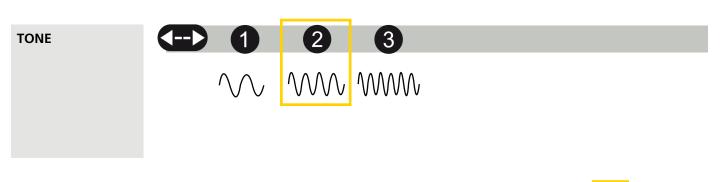

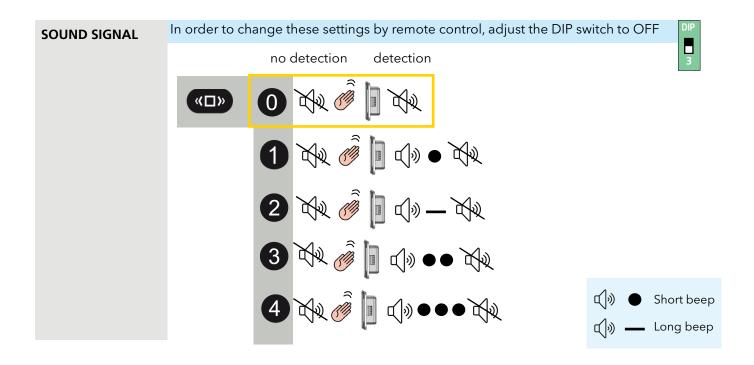

5 CONTROL INPUT

Visual and audible feedback when the control input is activated:

